# Data Sheet

## Item 1262


### 1. Product Description:

Shellac Cup Wheel


| | |
|---|---|
| **Dimensions (in):** | 5" x 2" x 5/8"-11H |
| **Dimensions (mm):** | 125 x 50 x 15.9-11H |
| **Abrasive:** | Silicon Carbide |
| **Specification:** | 1C220QBPE-1C4 |
| **Max. rpm:** | 7,650 |
| **Max. Speed:** | 50 m/s |
| **Line** | Easy Cut® |




**Type 11**

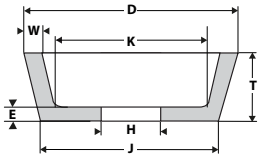


**D = 125 mm**
**T = 50 mm**
**H = 15.9 mm - 11H**

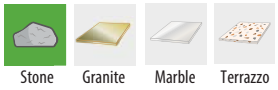


### Certification

**This cup is certified by the Organization for the Safety of Abrasives.**





**Angle Grinder**

### 1. Application

- Designed for polishing marble, terrazzo, and granite.
- Manufactured with black silicon carbide, cork, and polishing agents.
- C4 grade, for light grinding and enhanced surface gloss.
- Optimal performance with good surface finishes.
- Excellent price-to-performance ratio.

### 2. Operating instructions

- Use with a portable grinder designed for Type 11 cup wheels.
- Ensure that the grinder's operating speed does not exceed the maximum RPM indicated on the cup wheel.
- Ensure that the cup wheel is properly mounted and securely seated against a flat, unrecessed mounting flange.
- The mounting flange diameter must be at least one-third of the cup wheel diameter.
- Suitable for wet or dry grinding applications.
- Mount the cup wheel and allow it to run at no-load speed for one minute to check for damage.
- Do not apply excessive pressure or strike the cup wheel against the workpiece.

### 3. Safety information

- Never exceed the maximum operating speed indicated on the label.
- Always use the machine guard.
- Always wear appropriate personal protective equipment, including gloves, hearing protection, a dust mask or respirator, and safety glasses.
- Improper use may result in severe injury.
- Use in accordance with ANSI B7.1.

### 4. Handling

- Initial inspection should be performed while the product is in its original box. If there is visible evidence of damage to the packaging, the merchandise must not be accepted.
- Handle cup wheels carefully to prevent impacts or drops. If a cup wheel has been dropped, cracked, has lost a section, or is suspected to be damaged, it must not be mounted.

### 5. Storage

- Store cup wheels on a flat surface. Do not strike or drop them.

Cup wheels should not be exposed to:
(a) Water or other solvents.
(b) Extreme temperatures or humid conditions.
- For additional information, refer to ANSI B7.1.

### 6. Packaging units

- 8 pieces.

www.austromex.com.mx